

# NEW FIRMWARE ERASE-ALL WIRELESS DEVICES

## Pendant Pairing and Erasing

### Programming a wireless device:

Note: Ensure igeacom is plugged in and mounted in the wall securely.

1. Press and hold the Cancel and Menu button together for 5 sec (the unit will sound a constant beep. When it stops the unit is ready to learn a new wireless device. It will continue to beep softly every 10 sec to notify the installer that it is in programming mode.
2. Press the red button on the pendant, Pull the cord on the pull station or press activated device attached to RF3 Sensor, within 50ft of the unit and listen for confirmation tone on the igeacom.



To erase all programmed wireless devices press and hold Cancel and Activity button for 5 seconds


# NEW FIRMWARE ERASE-ALL WIRELESS DEVICES

## Pendant Pairing and Erasing

### Programming a wireless device:

Note: Ensure igeacom is plugged in and mounted in the wall securely.

1. Press and hold the Cancel and Menu button together for 5 sec (the unit will sound a constant beep. When it stops the unit is ready to learn a new wireless device. It will continue to beep softly every 10 sec to notify the installer that it is in programming mode.
2. Press the red button on the pendant, Pull the cord on the pull station or press activated device attached to RF3 Sensor, within 50ft of the unit and listen for confirmation tone on the igeacom.

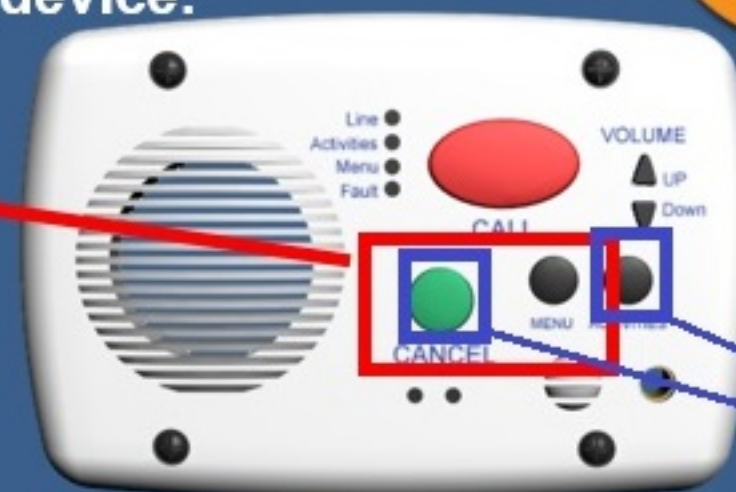

To erase all programmed wireless devices press and hold Cancel and Activity button for 5 seconds